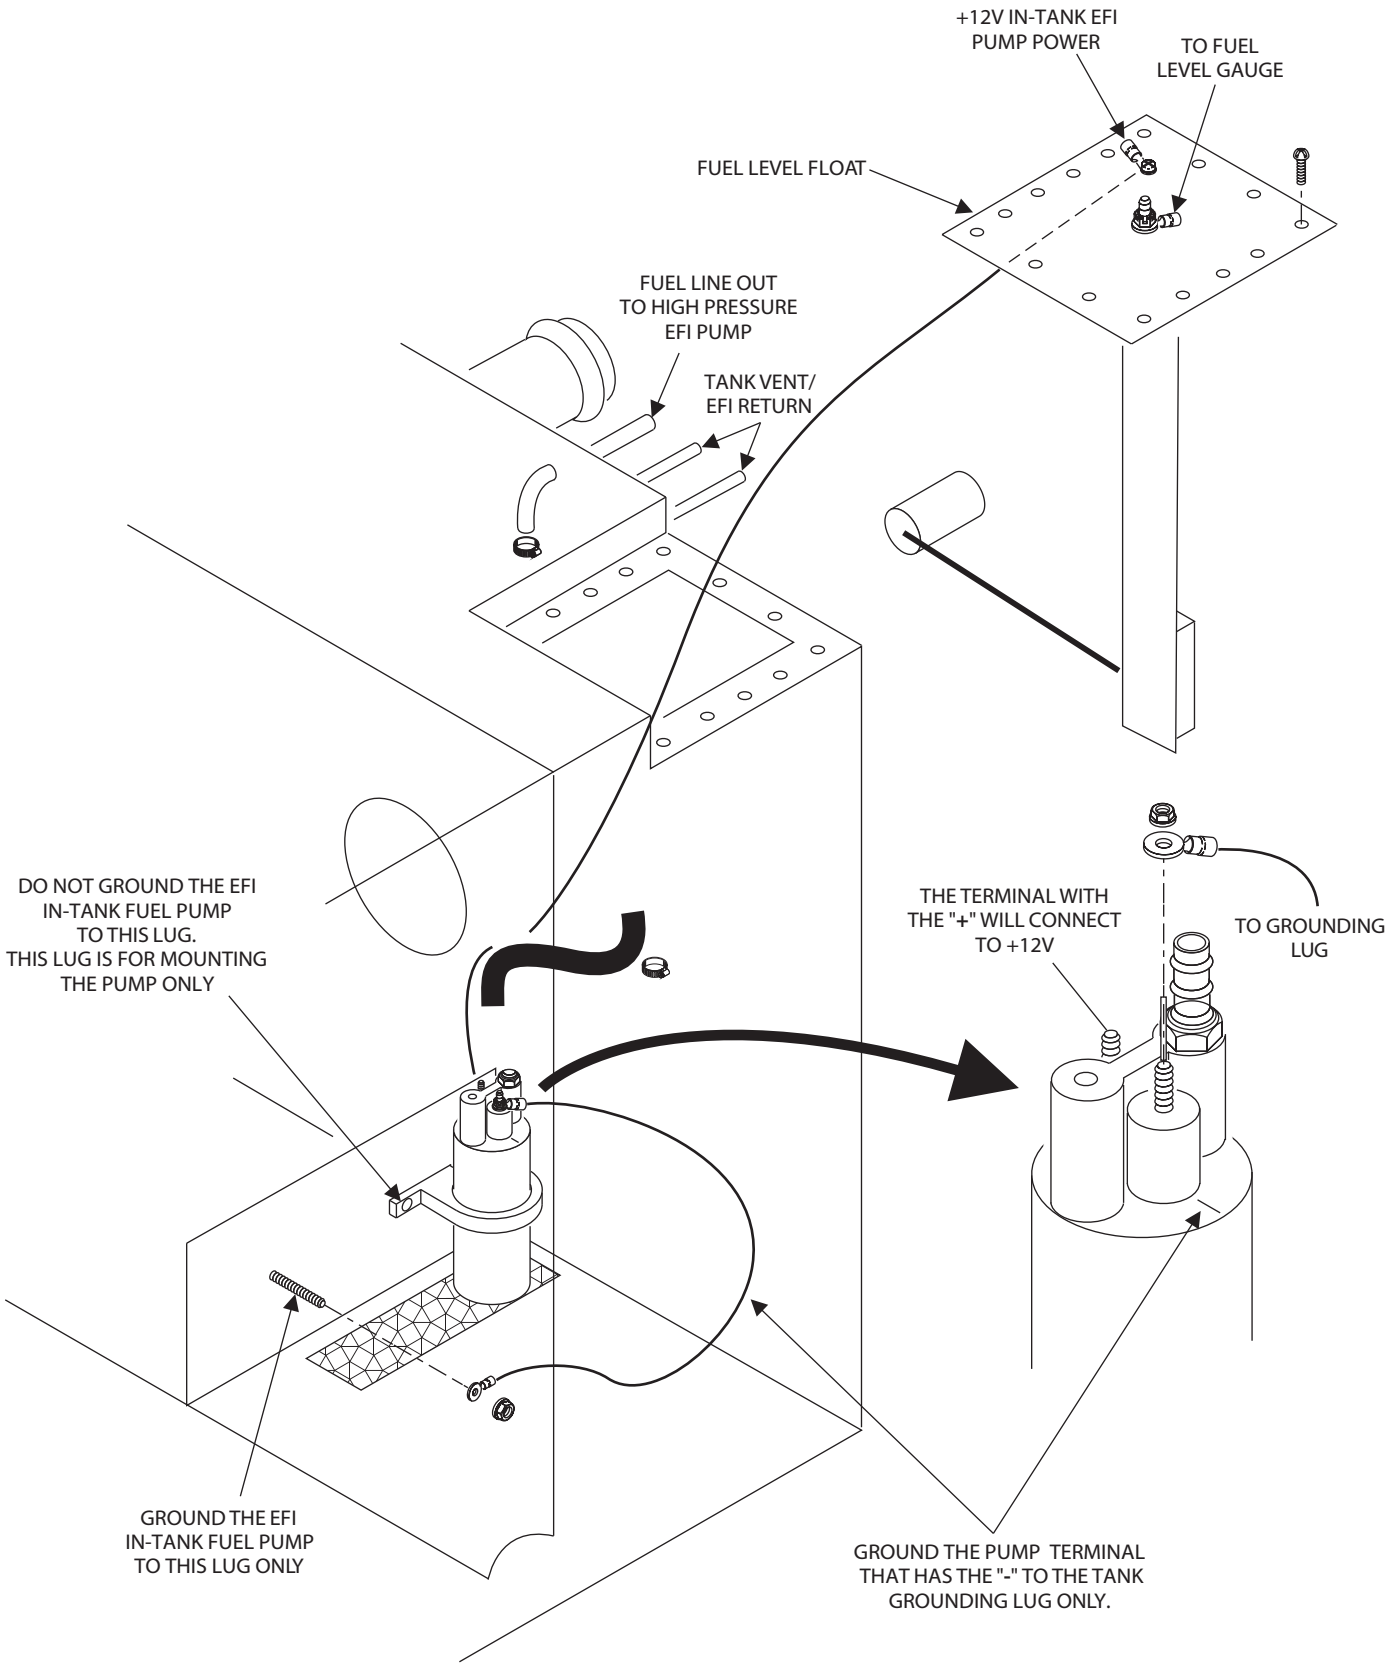
+12V IN-TANK EFI
PUMP POWER
TO FUEL
LEVEL GAUGE
FUEL LEVEL FLOAT
FUEL LINE OUT
TO HIGH PRESSURE
EFI PUMP
TANK VENT/
EFI RETURN
DO NOT GROUND THE EFI
IN-TANK FUEL PUMP
TO THIS LUG.
THIS LUG IS FOR MOUNTING
THE PUMP ONLY
THE TERMINAL WITH
THE "+" WILL CONNECT
TO +12V
TO GROUNDING
LUG
GROUND THE EFI
IN-TANK FUEL PUMP
TO THIS LUG ONLY
GROUND THE PUMP TERMINAL
THAT HAS THE "-" TO THE TANK
GROUNDING LUG ONLY.