


BC Broncos Heim Steering Measurements

HOW TO MEASURE TIE ROD AND DRAG LINK FOR HEIM CONVERSION

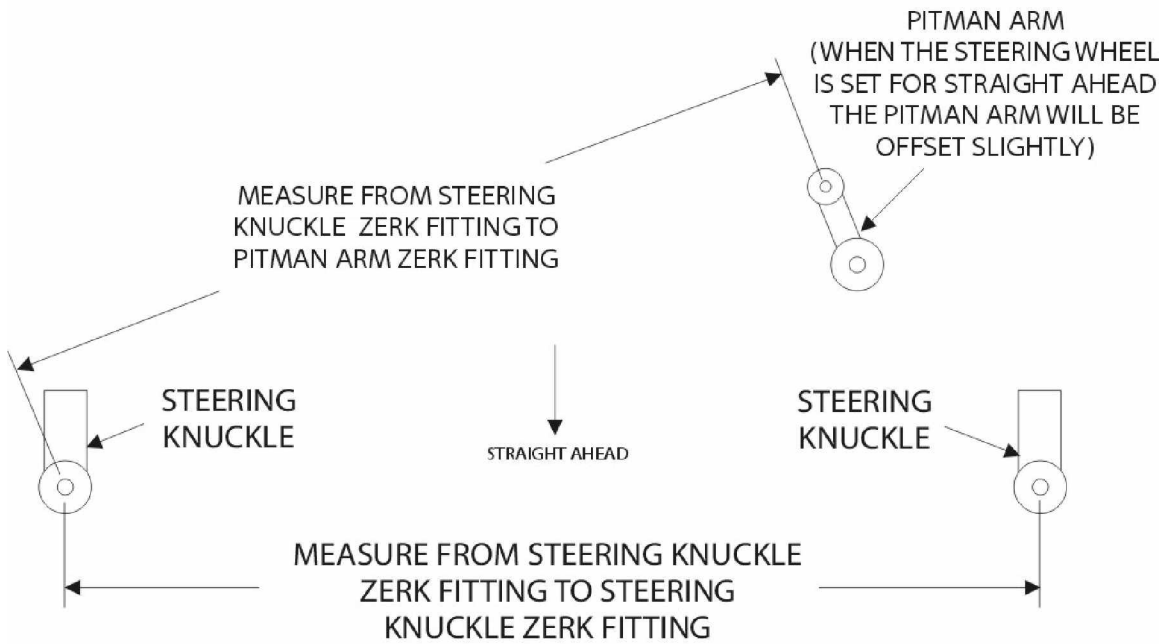

TAKE ALL MEASUREMENTS WITH THE PITMAN ARM AND STEERING KNUCKLES ARE IN THE STRAIGHT AHEAD POSITION

